

# ASSEMBLY INSTRUCTIONS - DIRECT MOUNTED MODEL:

MP42xS

MP45xS

MP55xS


## Applies to the following installations;

- Probe lengths exceeding 15 feet.
- Chemical, solvent or heated tanks using standard PVC leader cable.
- Pressurized tanks. Consult with Technical Support for pressure limits.

Questions? Contact Technical Support at (800) 209-7858


FOR INSTALLATION AND WIRING SEE TMS MANUAL

- 1 Confirm you were supplied the correct number of floats (1 or 2). A Probe P/N with "21" or "25" suffix requires DUAL (2) floats while "11" or "15" suffix requires a SINGLE (1) float. Contact Pneumercator immediately if supplied Probe and number of floats do not match.
- 2 The top of the probe is an ungageable deadband. Verify that the probe is of sufficient length so that the float's magnet will not travel into this deadband.

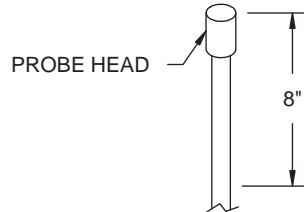

### 3 4" DIRECT MOUNTING ASSEMBLY


#### STANDARD APPLICATIONS

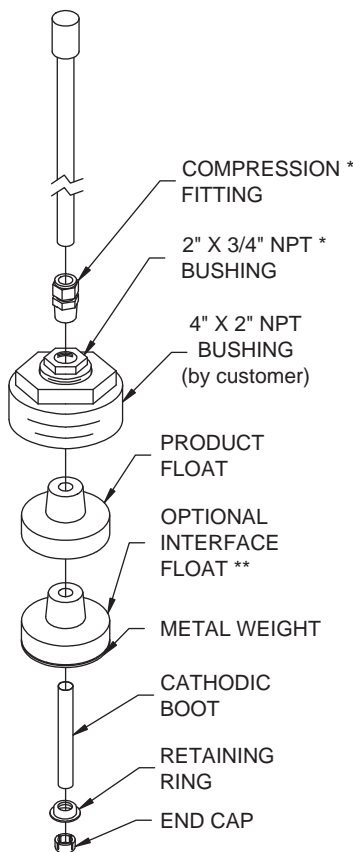

### 2" DIRECT MOUNTING ASSEMBLY


#### STANDARD APPLICATIONS

WITH INTERFACE \*\*      WITHOUT INTERFACE

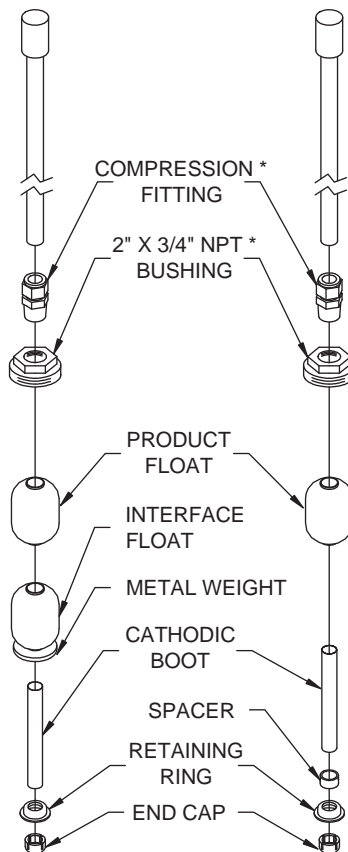

#### CHEMICAL APPLICATIONS

WITH INTERFACE \*\*      WITHOUT INTERFACE

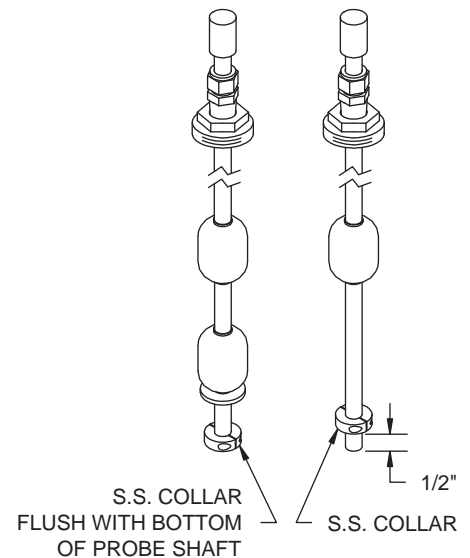

\* PURCHASED SEPARATELY FROM PNEUMERCATOR AS MODEL NO. PK2-DMx.  
 \*\* NOT APPLICABLE FOR MP42xS